

Slide Rail Installation Way:Right Door Clockwise Installation Template (Left Door Is Opposite)

Installation dimension (unit:mm)

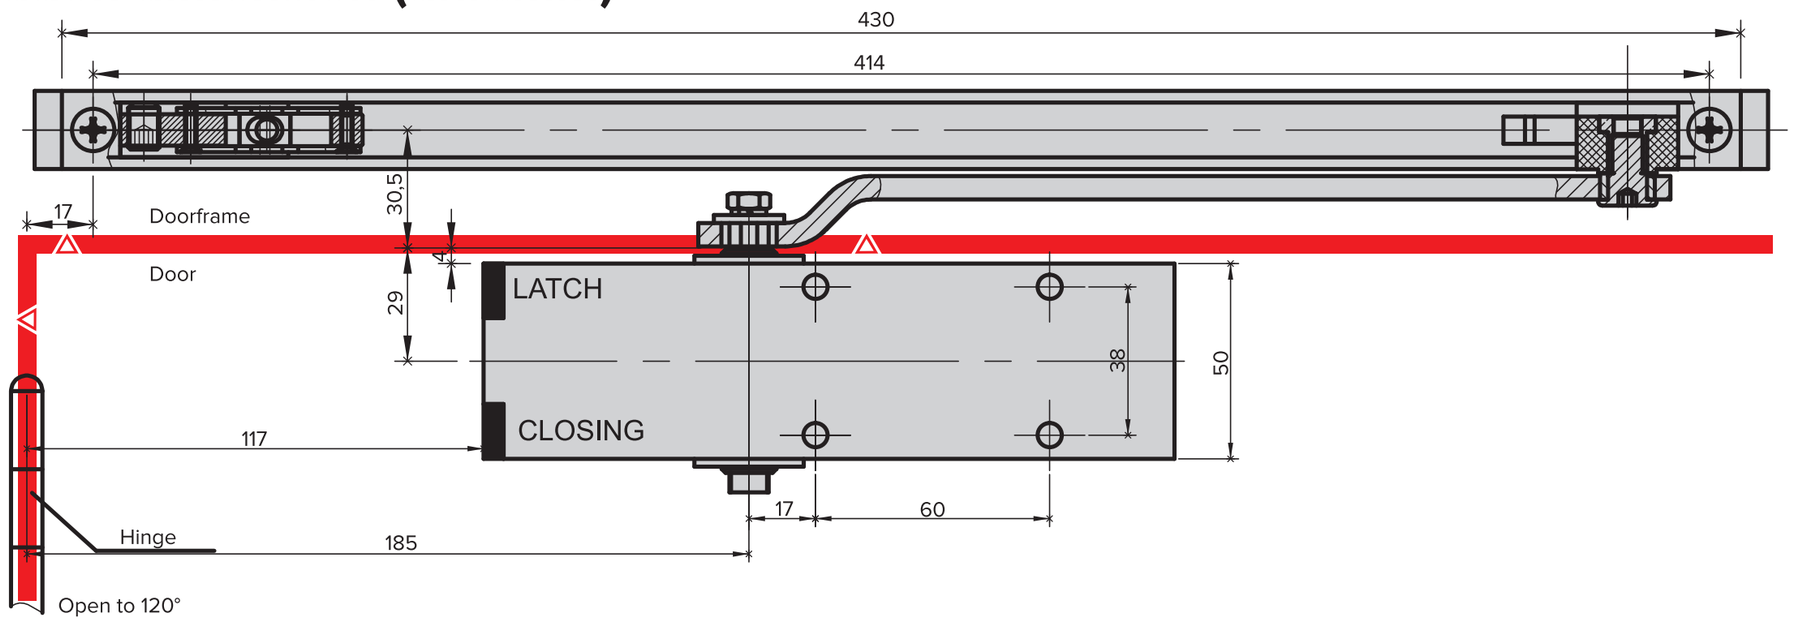


Installation reversely (unit:mm)

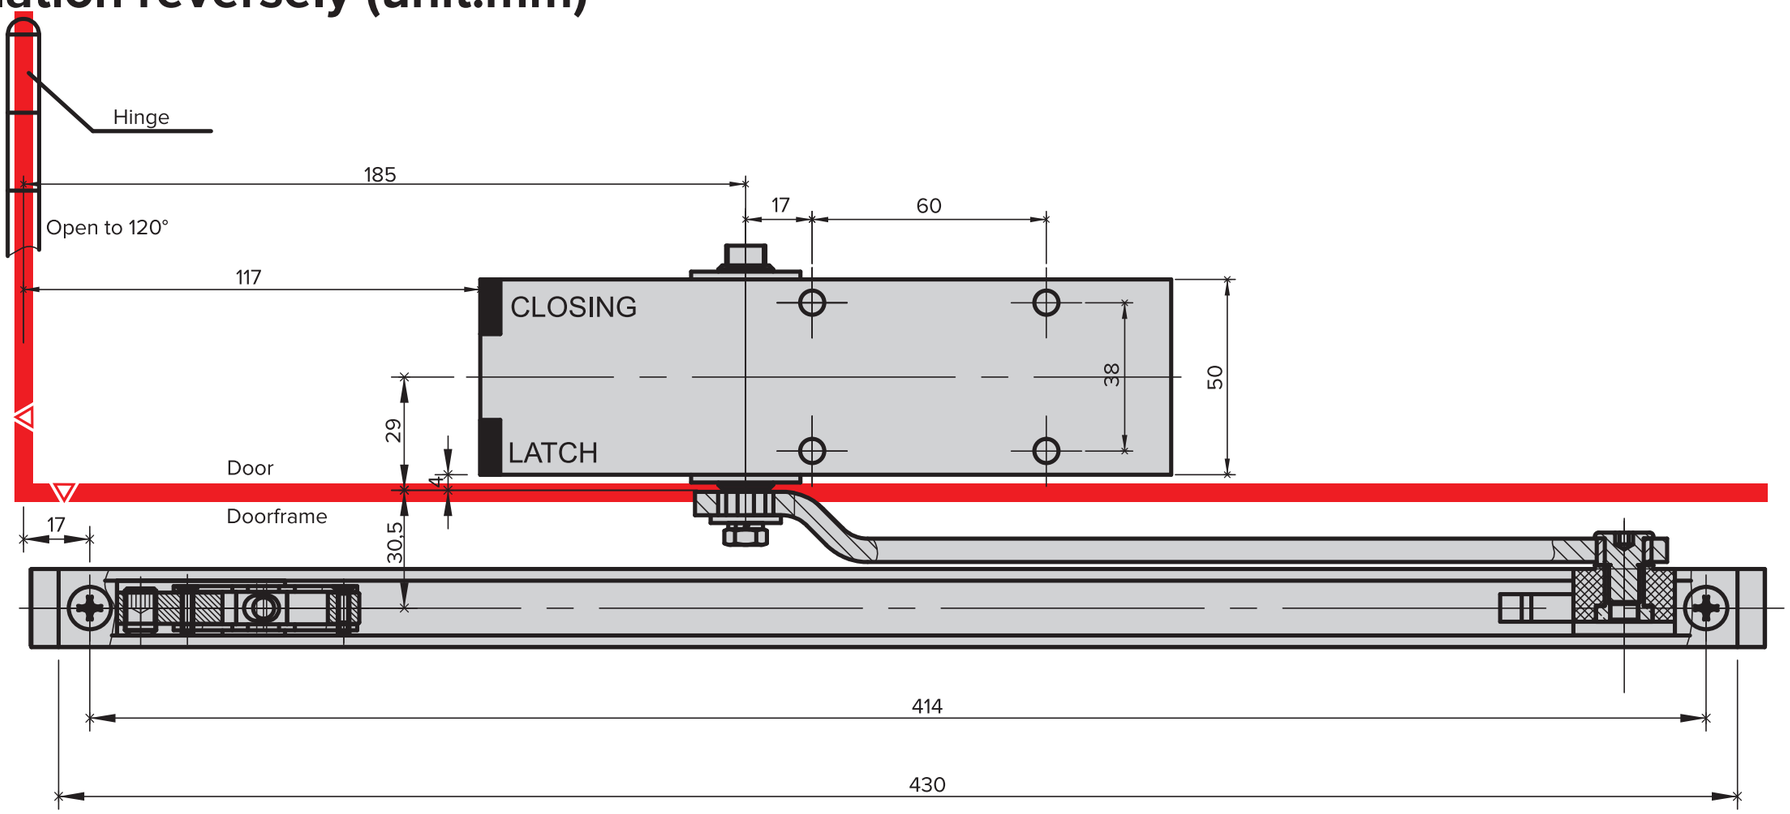


Installing Step


dormakaba

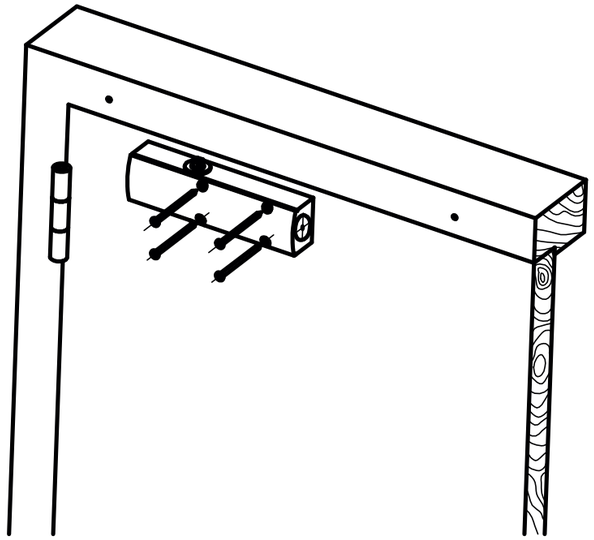


1. Drill holes on frame and door according to dimension of installation template, install door closer body on door , and tighten it.

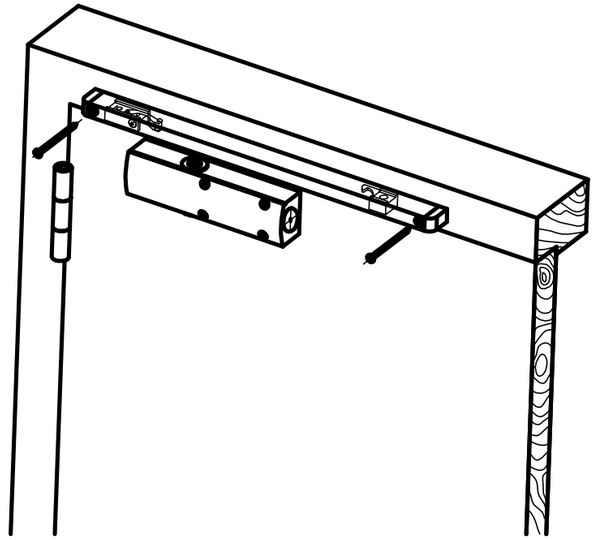


2. To incline the arm to 45 degree upward the door , and fix it on the door closer, tighten by assembling screv.

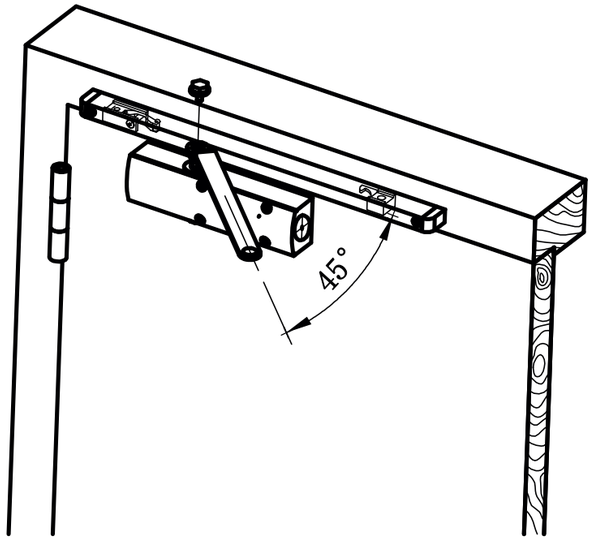


3. Preload the support parts of slide rail, put idler wheel of arm in the sliding arm as the figure showed.

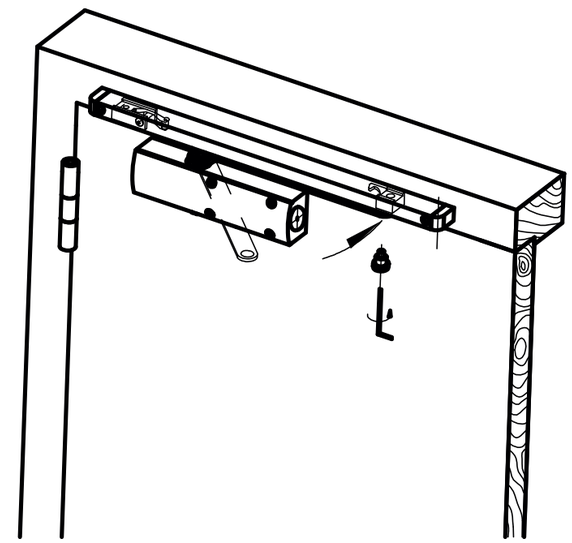

4. Closer the door , install the support parts at the end of slide rail , then press the slide rail and arm to the direction as figure showed, let slide rail stick to door.

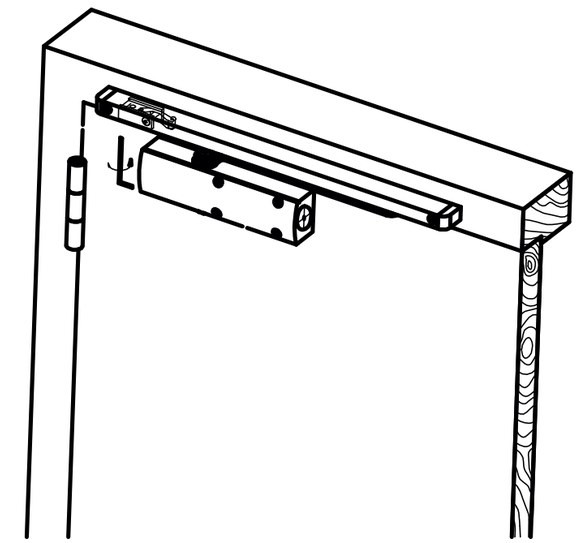

5. Find correct mount hole in slide rail , then use screw and tighten it.

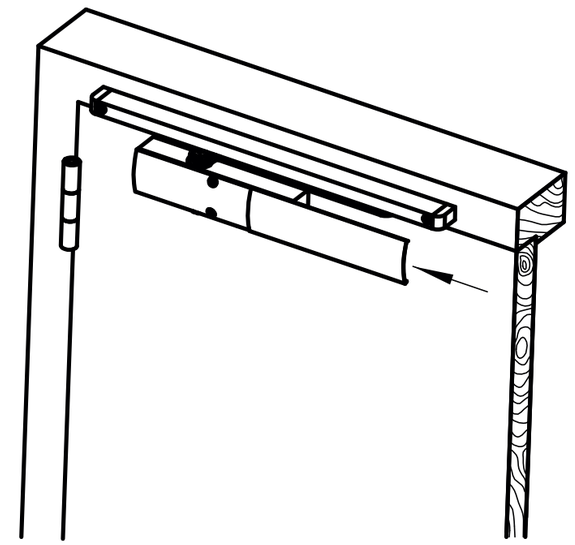

6. Adjust proper closing power according to fact , and adjust well closing speed , latching speed, delaying speed and backcheck speed, finally cover the cover board.

I . Adjustable of opening and closing speed.



120°~15°is closing speed range.
15°~ 0°is latching speed range.



When the governing valve counterclockwise rotates,the speed is acceleration;when the governing valve clockwise rotates ,the speed is deceleration.

II . Notice:

1.The door closer has automatic closing function ,so forbid to close the door forcibly.

2.After have been used for half month each screw must be tighten up once. If the assembling screw of rockerarm is loose it must be tighten up.

3.Please note the adjustment of speed in the summer and winter yearly.